

## Core Handling Instructions

The following actions will cause a loss of calibration:

1. Use of metallic tools to grip the core.
2. Use of a vise or similar device.
3. Any impact to the surface of the core.
4. Do not bend, sand, scratch or manipulate the surface of the core.
5. The use of any magnetic material for core rod.

We suggest the use of finger pressure and thread locking adhesive to attach core to core rod.